



# Melody 1

## Platform Lift

[www.terrylifts.co.uk](http://www.terrylifts.co.uk)



## Low-rise platform lift for domestic & public access

The Melody 1 Platform Lift offers a reliable and compact solution for wheelchair access. Whether installed for domestic or public access use, the lift provides a more convenient and practical alternative when constructing a ramp is not feasible. The design incorporates an external fixed ramp to eliminate the need for a pit, keeping building work to a minimum. In public buildings, Melody 1 allows for compliance with current disability regulations.

### Standard features

- **Quick installation** in one day – minimal building work required
- No need for an enclosure or support tower
- **Easy to operate**, illuminated constant pressure controls
- **Attractive** stainless steel finish (RAL colours available as an option)
- **Upper level gate option** (required when lifting height exceeds 290 mm for domestic and 260 mm for public access)
- **Pit option** available for internal use
- Optional **security features** (Radio enabler, Radio isolate and Authorised key holder)
- Optional **polycarbonate infill panels** to gate and carriage sides
- Optional **bridging steps** for domestic applications only

### Specifications

**Application range:** Wheelchair users and people with impaired mobility. Internal and external locations

**Safe working load:** 250 kg

**Maximum travel:** 1000 mm

**Lifting mechanism:** Hydraulic scissor

**Rated speed:** 0.06 m/s

**Electrical supply:** Single phase 220/240 V ~ 50/60 Hz


**Low voltage operating system:** 24 VDC

**Operating temperature range:** -10 °C to +40 °C

**Safety:** Full platform safe edge which stops the lift should it touch any obstacle in the down direction only. Fully interlocked carriage gate and upper gate (if required). Bellows style cover prevents access to lifting mechanism. The lift has full battery back-up and an on-car emergency lowering facility.

### Dimensions

All dimensions in mm

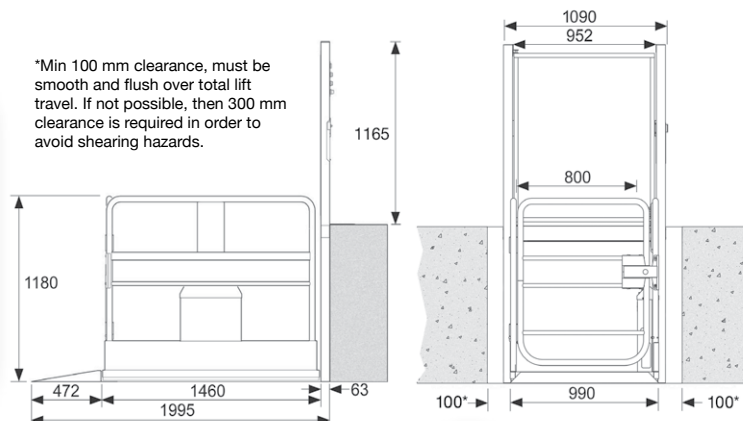

### The Terry Lifts Guarantee



- ✓ **Safety:** Full safety features
- ✓ **Compliance:** BS6440:2011 and Machinery Directive
- ✓ **Certification:** ISO 9001:2015, ISO 14001:2015 and OHSAS 18001:2007
- ✓ **Origin:** Designed & manufactured in the UK with over 45 years' experience

Issue date: 4/2017

Call MMS Medical today on: **021 4618000** or  
e-mail: **info@mmsmedical.ie**



**MMS Medical**  
51 Eastgate Drive,  
Little Island,  
Cork.  
T: 021 4618000 E: info@mmsmedical.ie  
www.mmsmedical.ie

